

✓ **COMPATIBLE WITH**

- Seat Swing
- Baby Swing
- Wrecking Swing
- Bounce Swing
- Nest Swing

## PRE-INSTALLATION

### If your Swing is packaged with 2 foam coverings:

Slip them over the 2 rope sections at the very top of your Swing.

### If your Swing is packaged with 1 foam covering:

Slip it over the rope section at the very bottom of your Swing.

## INSTALLATION: NEST SWINGS

### VULY MINI:

Remove the first set of carabiners and the Height Adjustment Straps on both sides of the Swing.

Unlock the carabiners on your Swing, and hook them into the lugs on the Swing Rail.

### VULY MAX:

Unlock the carabiners on your Swing, and hook them into the lugs on the Swing Rail.

### VULY QUEST:

Unlock the carabiners on your Swing, and hook them into the accessory attachments on the Swing Rail.

Please ensure that the Accessory joiners on your Quest Swing Rail are positioned at minimum 60cm apart.

---

Ensure that both carabiners are facing the same direction and have been firmly tightened.

## INSTALLATION: BABY, BOUNCE, SEAT AND WRECKING

### VULY MAX AND MINI:

Unlock the carabiners on your swing, and hook them into the lugs on the Swing Rail.

### VULY QUEST:

Unlock the carabiners on your Swing, and hook them into the accessory joiners.

(Ensure that the Accessory Attachments on the Quest Swing Rail are positioned at minimum of 51cm apart)

---

Ensure that both carabiners are facing the same direction.

## HEIGHT ADJUSTMENT

**To lower:** Lift your Swing and feed the rope(s) up through the Height Adjustment Buckles until you reach the desired height.

**To raise:** Lift the top(s) of the Swing rope(s) and feed down through the Height Adjustment Buckles until you reach the desired height.

---

# CONGRATULATIONS!

You have attached your Swing onto your Vuly Swing Set.

---



**ADULT SUPERVISION IS REQUIRED AT ALL TIMES** WHILST EQUIPMENT IS IN USE.  
**VULY CARES ABOUT SAFETY.**

## **ATTENTION!**

Safety information, installation and use instructions.

Read prior to installing and using the swings.

See [VulyPlay.com/support](https://www.vulyplay.com/support) for any updates to these instructions.

## **WARNING!**

- Minimum user age – 6 years. Only for domestic and outdoor use.
- Maximum user weight per swing station – 80 kg (175 lb) [65 kg (132 lb) on Spin Swing].
- Maximum combined user weight per swing set section – 150 kg (330 lb).
- Adult assembly required. Adult supervision required at all times.
- Ensure that the Swing Set is secured with anchors or bolts before use.

## **Vuly Play**

95 Ingleston Rd, Brisbane QLD 4154

AU: 1300 667 514

US: 1-800-467-1421

[www.vulyplay.com](https://www.vulyplay.com)