



VULY[®]

Rover Wagon[™]

MANUAL

THIS MANUAL PROVIDES ASSEMBLY INSTRUCTIONS FOR
THE BEACH ROVER AND ROVER WAGON CART.

Attention!

SAFETY INFORMATION, INSTALLATION, CARE AND MAINTENANCE
INSTRUCTIONS. READ PRIOR TO ASSEMBLING AND USING THE PRODUCT.

Vuly cares about safety. Adult supervision is required at all times whilst
equipment is in use.

Visit www.vulyplay.com/install
for step by step video instructions,
or scan this QR code:



ENSURE THAT AS YOU FOLLOW THESE INSTRUCTIONS, YOU FIRMLY SECURE ALL PARTS WITH NUTS AND BOLTS.



ADULTS ASSEMBLY IS REQUIRED AT ALL TIMES. VULY CARES ABOUT SAFETY. THIS MANUAL PROVIDES INSTRUCTIONS FOR THE BEACH ROVER AND ROVER WAGON CART.


STEP | 1

Push down on the centre of the cart to fold out the unit.



STEP | 2

Unfold the padding and place it in the bottom the cart.

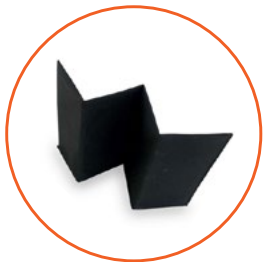

STEP | 3

Twist a shade pole into each screw at the corners of the cart.



STEP | 4

A. Position long and short shade supports at the top of each shade and line up the hole.

B. Gently place the shade cover on top, and attach securely with the provided bolts using the allen key.



STEP | 5

Adjust the handle, as desired, by releasing it from the plastic holder first before extending it.




CONGRATULATIONS!


You have assembled your Vuly wagon.

MAINTENANCE AND CARE

Improper use or lack of care can lead to your product deteriorating earlier than expected. Please follow all of these care instructions to ensure that your product lasts for as long as possible.

WEATHER CARE

 Cover your product when not in use.

 Store your product during inclement weather.

STORAGE

Store in a cool, dry place.

SAFE USE


Save these instructions in case you need to contact Vuly for replacement parts.

Remember: *Failure to follow these safety instructions may result in injury or property damage, and will also void your warranty.*

SAFETY WARNINGS FOR INSTALLATION

- Assemble the system in accordance with these instructions only.
- Ensure that the system is properly and completely assembled before use.

SAFETY WARNINGS FOR USE

- For domestic use only.
 - For outdoor use only.
 - For use under adult supervision only.
 - Adult assembly required.
 - Use caution when operating on an incline.
 - Not suitable for children under 3 years.
 - Maximum user weight: 80 kg
- 



vulyplay.com